

# **IKAR PLW Bracket**

> Assembly & Operation Guide

# > Contents

Fitting device into Bracket	4
PORTAGANTRY RAPIDE * 500	6
PORTAGANTRY RAPIDE" 1000	8
PORTAGANTRY* Small & Medium	10
PORTAGANTRY*	12
TDAVIT*	14
PORTADAVIT QUANTUM Column	16
PORTADAVITIQUANTUM]* Backstay	18
PORTADAVIT <sup>®</sup> 500	20
<b>PORTX</b> * DAVIT Single Winched	22
<b>PORTX</b> *DAVIT Double Winched	24

**IKAR PLW Bracket** 



# Lightweight. Portable. **Safe.**

Please read the following instructions and guidance notes carefully. These have been designed to aid users in carrying out the correct assembly of the bracket for each of our compatible lifting systems. Systems compatible with this product are:

- > PORTAGANTRY [RAPIDE]"
- > PORTAGANTRY
- > TDAVIT
- > PORTADAVIT QUANTUM!"
- > PORTADAVIT
- > PORTX DAVIT

#### **General Specification**

- > Maximum rated capacity for personnel lifting 150kg
- > Ensure the rating of the Winch is always checked before use
- > For use with REID lifting products only

#### Standards

- > EN1496:2017
- > EN795:2012 Type B
- > EN13157:2004+A1:2009

For further information please refer to the technical data sheet for this product.

# > Assembly Instructions: Fitting the Device

The following instructions detail the assembly of the IKAR PLW device into the universal bracket.




### **IKAR PLW Bracket**


#### Assembling the **IKAR PLW** onto the connecting plate.



Remove the washers and nyloc nuts from the bracket.

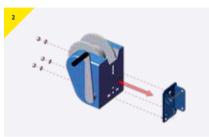

> Present the device to the bracket, resecure the bolts using the washers and nyloc nuts.

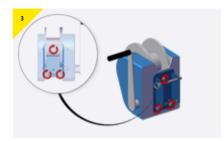

> Adjust the position by tightening the hex bolts.



> The device is now ready to use.

Now install the product into face bracket, column or backstay.

# > Assembly Instructions: PORTAGANTRY RAPIDE® 500

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004220] for the PORTAGANTRY [MIND: 500kg.




### IKAR PLW Bracket - [RAWB004220]


#### Assembling the IKAR PLW Bracket on PORTAGANTRY RAPIDE® 500



> The bracket comes with the pins and M12 bolts supplied, as shown above.

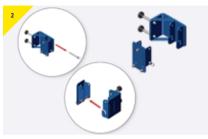

 Disassemble the bracket by removing the pins, bolts and separating the pieces.

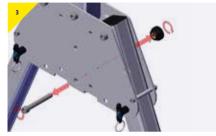

> Remove the bottom bolt from the trap plate.



Present the bracket to the trap plate and secure with the M12 bolts supplied. Ensure to align the lower bolt to the same hole as the bolt was just removed from.



 Reassemble the bracket using the pins provided as shown. First the lower pin and slide into place and secure with the top pin.



# > Assembly Instructions: PORTAGANTRY RAPIDE® 1000

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004220] for the PORTAGANTRY [RAPE] 1000kg.




### IKAR PLW Bracket - [RAWB004220]


#### Assembling the IKAR PLW Bracket on PORTAGANTRY RAPIDE" 1000




> The bracket comes with the pins and M12 bolts supplied, as shown above.

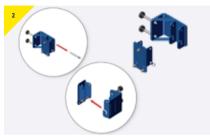


 Disassemble the bracket by removing the pins, bolts and separating the pieces.

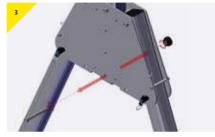

> Remove the bottom bolt from the trap plate.

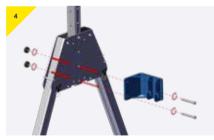

Present the bracket to the trap plate and secure with the M12 bolts supplied. Ensure to align the lower bolt to the same hole as the bolt was just removed from.

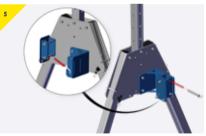

 Reassemble the bracket using the pins provided as shown. First the lower pin and slide into place and secure with the top pin.



# Assembly Instructions: PORTAGANTRY® S & M

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004225] for the PORTAGANTRY Small and Medium frame sizes.




### IKAR PLW Bracket - [RAWB004225]

#### Assembling the IKAR PLW Bracket onto a small or medium PORTAGANTRY\*



> The bracket comes with the pins and M12 bolts supplied, as shown above.

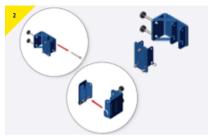

 Disassemble the bracket by removing the pins, bolts and separating the pieces.



Present the bracket to the trap plate as shown, secure both M12 bolts through the correct holes as shown.



Reassemble the bracket using the pins provided as shown. First the lower pin and slide into place and secure with the top pin.



# > Assembly Instructions: PORTAGANTRY<sup>®</sup>

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004200] for the PORTAGANTRY".



### IKAR PLW Bracket - [RAWB004200]

### Assembling the IKAR PLW Bracket onto a PORTAGANTRY\*



> The bracket comes with the pins supplied, as shown above.



> Remove the pins and present the bracket to the winch column, aligned to the holes as shown.



> Insert both pins to ensure the bracket is securely attached.



# > Assembly Instructions: TDAVIT<sup>®</sup>

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004200] for the **T**DAVIT<sup>\*</sup>.




### IKAR PLW Bracket - [RAWB004200]


### Assembling the IKAR PLW Bracket onto a TDAVIT\*



> The bracket comes with the pins supplied, as shown above.

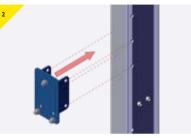

> Remove the pins and present the bracket to the column, aligned to the holes as shown.

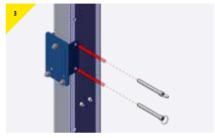


> Insert both pins to ensure the bracket is securely attached.



# > Assembly Instructions: PORTADAVIT QUANTUM® Column.

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004200] for the **PORTA**DAVIT@WATUM? column. **Warning:** For this configuration a sheave bracket column is required.

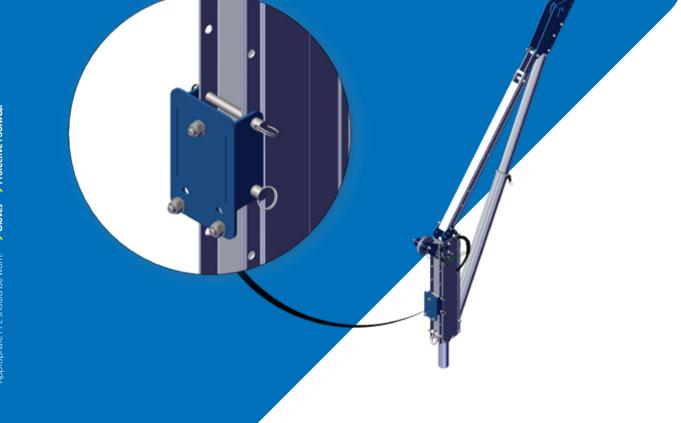


### IKAR PLW Bracket - [RAWB004200]


#### Assembling the **IKAR PLW Bracket** onto a **PORTA**DAVIT **COLUMN** column.



> The bracket comes with the pins supplied, as shown above.

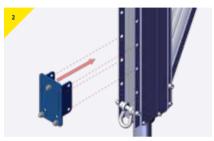

> Remove the pins and present the bracket to the column, aligned to the holes as shown.

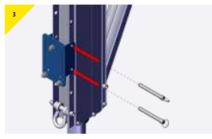


> Insert both pins to ensure the bracket is securely attached.




> Present the sheave bracket\* to the top of the column, aligning wth the top holes as shown.



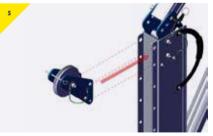

> Secure using the pins provided.

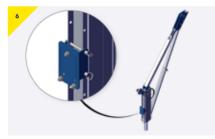

# > Assembly Instructions: PORTADAVIT QUANTUM<sup>®</sup> Backstay.

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004206] for the PORTADAVIT COMMUNICATION Backstay.



### IKAR PLW Bracket - [RAWB004206]


### Assembling the **IKAR PLW Bracket** onto a **PORTA**DAVIT **WANTUM**<sup>\*</sup> Backstay.



> The bracket comes with the pins supplied, as shown above.



> Remove the pins and present the bracket to the backstay, aligned to the holes as shown.

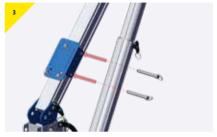

> Insert both pins to ensure the bracket is securely attached.



# > Assembly Instructions: PORTADAVIT 500.

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004203] for the PORTADAVIT 500.



### IKAR PLW Bracket - [RAWB004203]

### Assembling the **IKAR PLW Bracket** onto a **PORTA**DAVIT 500.



> The bracket comes with the pins supplied, as shown above.



> Remove the pins and present the bracket to the backstay, aligned to the holes as shown.



> Insert both pins to ensure the bracket is securely attached.



# > Assembly Instructions: PORTX DAVIT Single Winch

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004200] for the PORTX DAVIT with a single winch.




### IKAR PLW Bracket - [RAWB004200]


### Assembling the **IKAR PLW Bracket** onto a **PORTX**\*DAVIT with a Single Winch.



> The bracket comes with the pins supplied, as shown above.

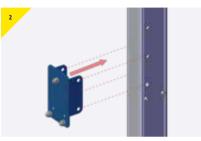

> Remove the pins and present the bracket to the column, aligned to the holes as shown.

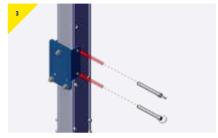


> Insert both pins to ensure the bracket is securely attached.



# > Assembly Instructions: PORTX DAVIT Double Winch

The following instructions detail the assembly of the IKAR PLW bracket [RAWB004209] for the PORTX DAVIT with a double winch.

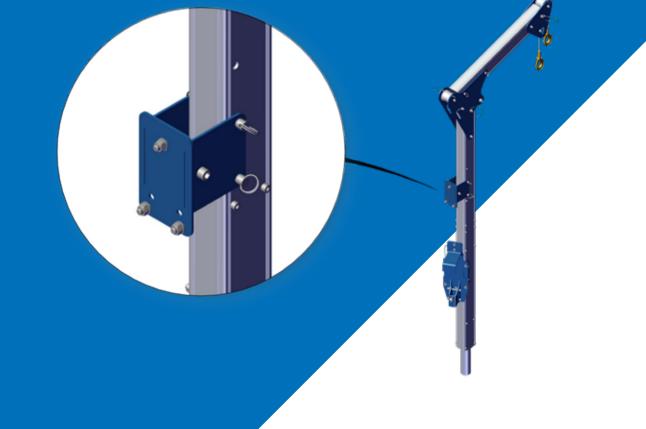


### IKAR PLW Bracket - [RAWB004209]


### Assembling the **IKAR PLW Bracket** onto a **PORTX**<sup>®</sup> DAVIT with a double Winch.




> The bracket comes with the pins supplied, as shown above.

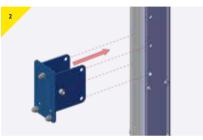

> Remove the pins and present the bracket to the column, aligned to the holes as shown.

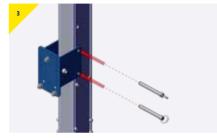

> Insert both pins to ensure the bracket is securely attached.

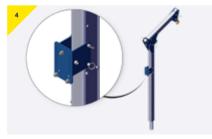






## > Contact Us

### Head Office, UK

Unit 1 Wyeview Newhouse Farm Industrial Estate Chepstow Monmouthshire NP16 6UD United Kingdom

- > +44 (0)1291 620 796
- > enquiries@reidlifting.com
- > www.reidlifting.com

All information herein is copyright protected by REID Lifting Ltd. All company and product names are Trade Mark and Trade Name protected and all REID Lifting Ltd. Product IPR is protected under Patents, Patents Pending and/or Design Rights.

Printed using environment friendly processes and materials.